

# *Illustrated Cleaning Guide for Best Steam Cleaning Results*



# *Illustrated Cleaning Guide for Best Steam Cleaning Results*

This guide illustrates the use of various accessories for cleaning a variety of surfaces.

The accessories pictured are supplied with the following Steam Cleaning Systems:

SteamKing Classic

SteamKing Atomic

SteamKing 360

SteamKing 360XL

SteamKing Prime

SteamKing 1500

and Vapour Jet, LadyBug and MondoVap cleaning systems sold by Intersteam Technologies.

# *Table of Contents*

<b>PAGE</b>	<b>CONTENT</b>
4	Accessory Overview
5-17	Included Accessories
18-27	Optional Available Accessories
28-34	Machine Set Up
35	Cloth Wrapping Procedure
36-38	Ready To Clean
39-41	Healthcare – Wheelchairs, Commodes, Slings and Sink Drains
42-46	Floors – Grout, Baseboards, Thresholds and Build Up
47-48	Carpet – Refresh and Spot and Stain
49-52	Washrooms – Toilets, Sinks, Counters, Mirrors and Partitions
53-57	Common Areas – Windows, Seating, Garbage Containers and Walls
58-64	Kitchen – Equipment, Storage, Ovens, Fryers and Walls
65-67	Specialty – Bed Bugs, Chewing Gum and Graffiti
68-70	What if I Need Help?
71	Disclaimer

## Professional Accessory Package

Your steam cleaning system is supplied complete with a comprehensive accessory package.

You will have received a steam hose, extension tubes, large rectangle and triangle brushes with towel clips, nozzles, nozzle brushes, window squeegee and fabric steaming accessory, and in some cases a scraper tool, drain steaming tool and grout nozzle brushes.

You can order replacement accessories for your steam cleaner at [www.intersteam.com](http://www.intersteam.com) by selecting your model and viewing the accessories listing there.



## *Standard Included Accessories*



3M Steam Hose



Part Number A6010 (Classic and Atomic Models), A6210 (Prime Model), A6310 (360 Model)

# *Standard Included Accessories*

## Extension Tubes

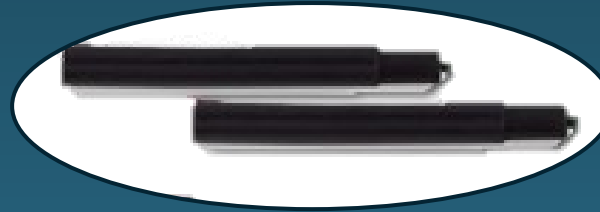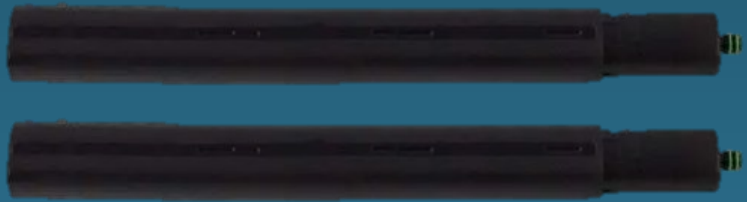

Part Number A6005

## *Standard Included Accessories*

Rectangle Brush  
With Towel Clips



Part Number A6001

## *Standard Included Accessories*

### Triangle Brush With Towel Clips



Part Number A6008



# *Standard Included Accessories*

Window /Fabric  
Tool with  
Squeegee Blade



Part Number A6004



# *Standard Included Accessories*

Standard (Black)  
Nozzle  
And Turbo  
Nozzle



Part Number A6003 & A6098

# *Standard Included Accessories*


Small Nozzle

Brushes-

Nylon

Brass

Steel

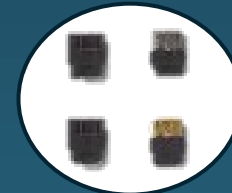

Part Number A6015, A6051 & A6065

# *Standard Included Accessories*

Medium Nozzle  
Brushes-  
Nylon (2)



Part Number A6014



## *Standard Included Accessories*

Large Nylon  
Nozzle Brush



Part Number A6011

# *Standard Included Accessories*

Nylon and Brass  
Bristle  
Professional  
Grout Brushes



Part Number A6038 & A6036

# *Standard Included Accessories*

## Crevice/Scraper Tool



Part Number A6017



## *Standard Included Accessories*

Plumber's  
Helper Drain  
Cleaning and  
Disinfection



Part Number A6111



## *Standard Included Accessories*

2 Microfibre  
Cloths



## *Optional Available Accessories*

### Large Round Nylon Nozzle Brush –Red Bristles

For colour coding to indicate  
specific application to avoid  
loss between operators and  
cross contamination



Part Number A6012

## *Optional Available Accessories*

### Grey Nozzle and Select Brushes

For colour coding to indicate  
specific application to avoid  
loss between operators and  
cross contamination




Part Number A6009 (nozzle)

## *Optional Available Accessories*

### Short Extension Tube

For ergonomic concerns  
and specialty applications

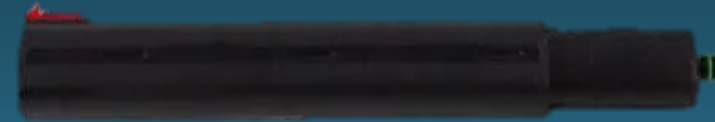

Part Number A6025

## *Optional Available Accessories*

### 5M Steam Hose

For ergonomic concerns  
and specialty applications



Part Number A6510

## *Optional Available Accessories*

### Aromatherapy Diffuser

For applying humidity and essential oils where desired



Part Number A60165

# *Optional Available Accessories*

## Rectangle Nozzle Brushes

Nylon Soft Bristle for  
Curved Surfaces –  
Handrails and Fabric

Nylon Stiff Bristle for  
Scrubbing

Brass Bristle for  
Maintenance Applications

Steel Bristle for Escalators  
and Heavy Duty Uses



Part Number A6058, A6224, A6225 & A6226

## *Optional Available Accessories*

Medium Round Nozzle  
Brushes

Brass Bristle for  
Maintenance Applications  
Steel Bristle for heavy duty  
use.

2 Rows Of Bristles for  
Excellent Durability



Part Number A6066, A6067

## *Optional Available Accessories*


Floor and Wall Mop with  
Microfibre Pad



Part Number A6019 & A6018 (accessories),  
A6016 & A6020 (covers)

## *Optional Available Accessories*

Steam Mop with 20 foot  
Hose

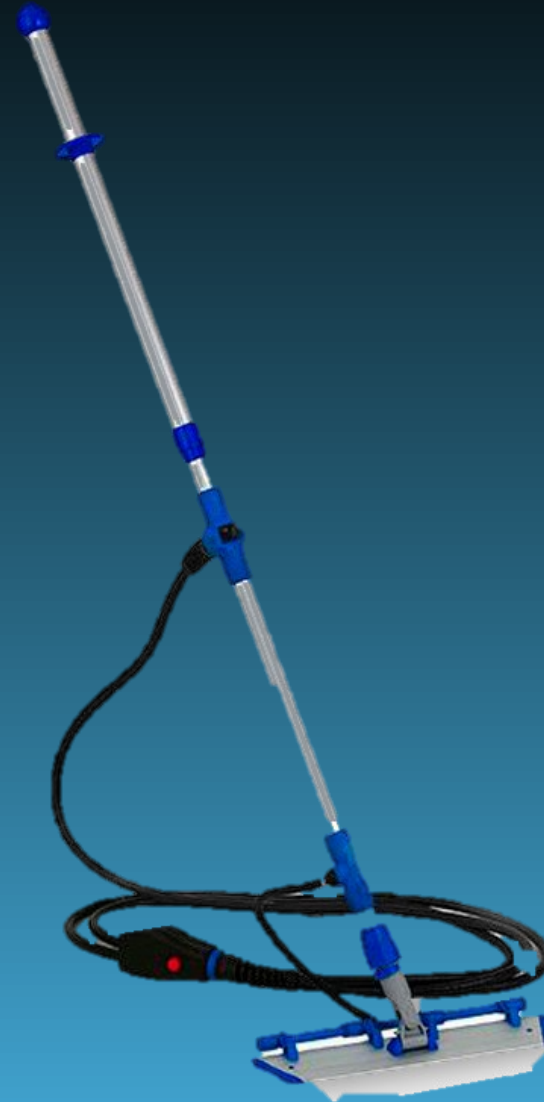

Part Number A8000092.0

## *Optional Available Accessories*

Lawn and Garden Care  
Accessory for Pesticide  
Free Weed Control



Part Number A6022

***DO NOT PULL THE STEAM GENERATOR AROUND BY OR TUG ON THE STEAM HOSE.***



***DO NOT PULL THE STEAM GENERATOR AROUND BY OR TUG ON THE STEAM HOSE.***

## **Steam Hose**

- Lift the hose socked cover and fit in the steam hose attachment. You will hear a click. When connected properly the electronic controls on the handle will have 12V of power. There are 2 switches on the handle which allow you to control the pressure of the steamer.
- The single dot button is steam setting one (low), the double dot button is steam setting two (medium) and using both buttons at once is steam setting 3 (high). DO NOT use on the high setting for periods longer than 10 minutes.




## *Operating Procedure – Accessories*

- Select your accessories and attach them properly to the hose.

**ATTACH ACCESSORIES SO THAT THEY FIT SNUG AND FLUSH. ENSURE SAFETY LOCK IS FIRMLY IN PLACE AND NOT DAMAGED.**



## *Operating Procedure – Accessories*

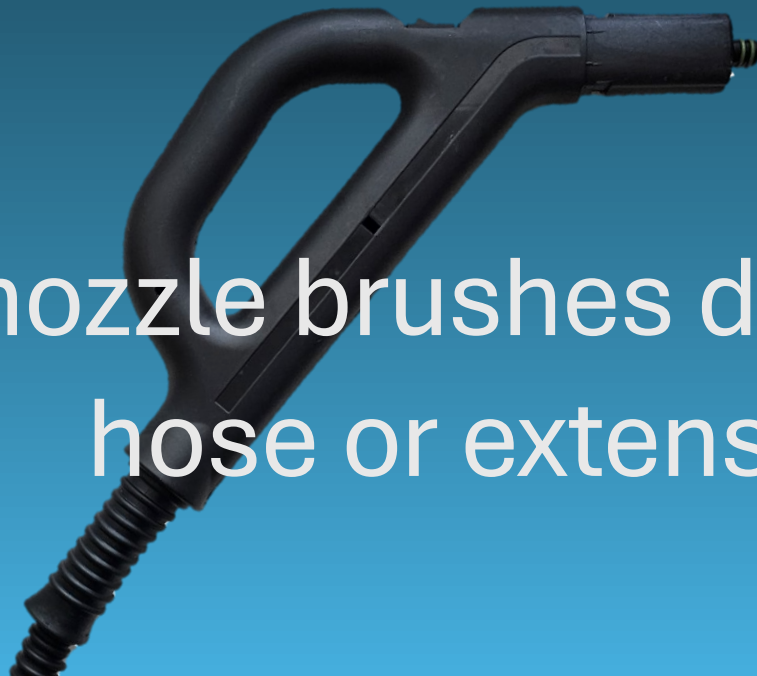

Never use nozzle brushes directly on the end of the hose or extension tubes.



## *Operating Procedure – Accessories*




All Nozzle Brushes and Innovative Specialty Accessories like the Grout Brush, Scraper Tool and Plumber's Helper fit on the end of the nozzle.



## *Operating Procedure – Accessories*

You can also place one or both extension tubes between the hose handle and the nozzle,

or between other accessories like the triangle or rectangle brush with towel clips, or the window/fabric tool.

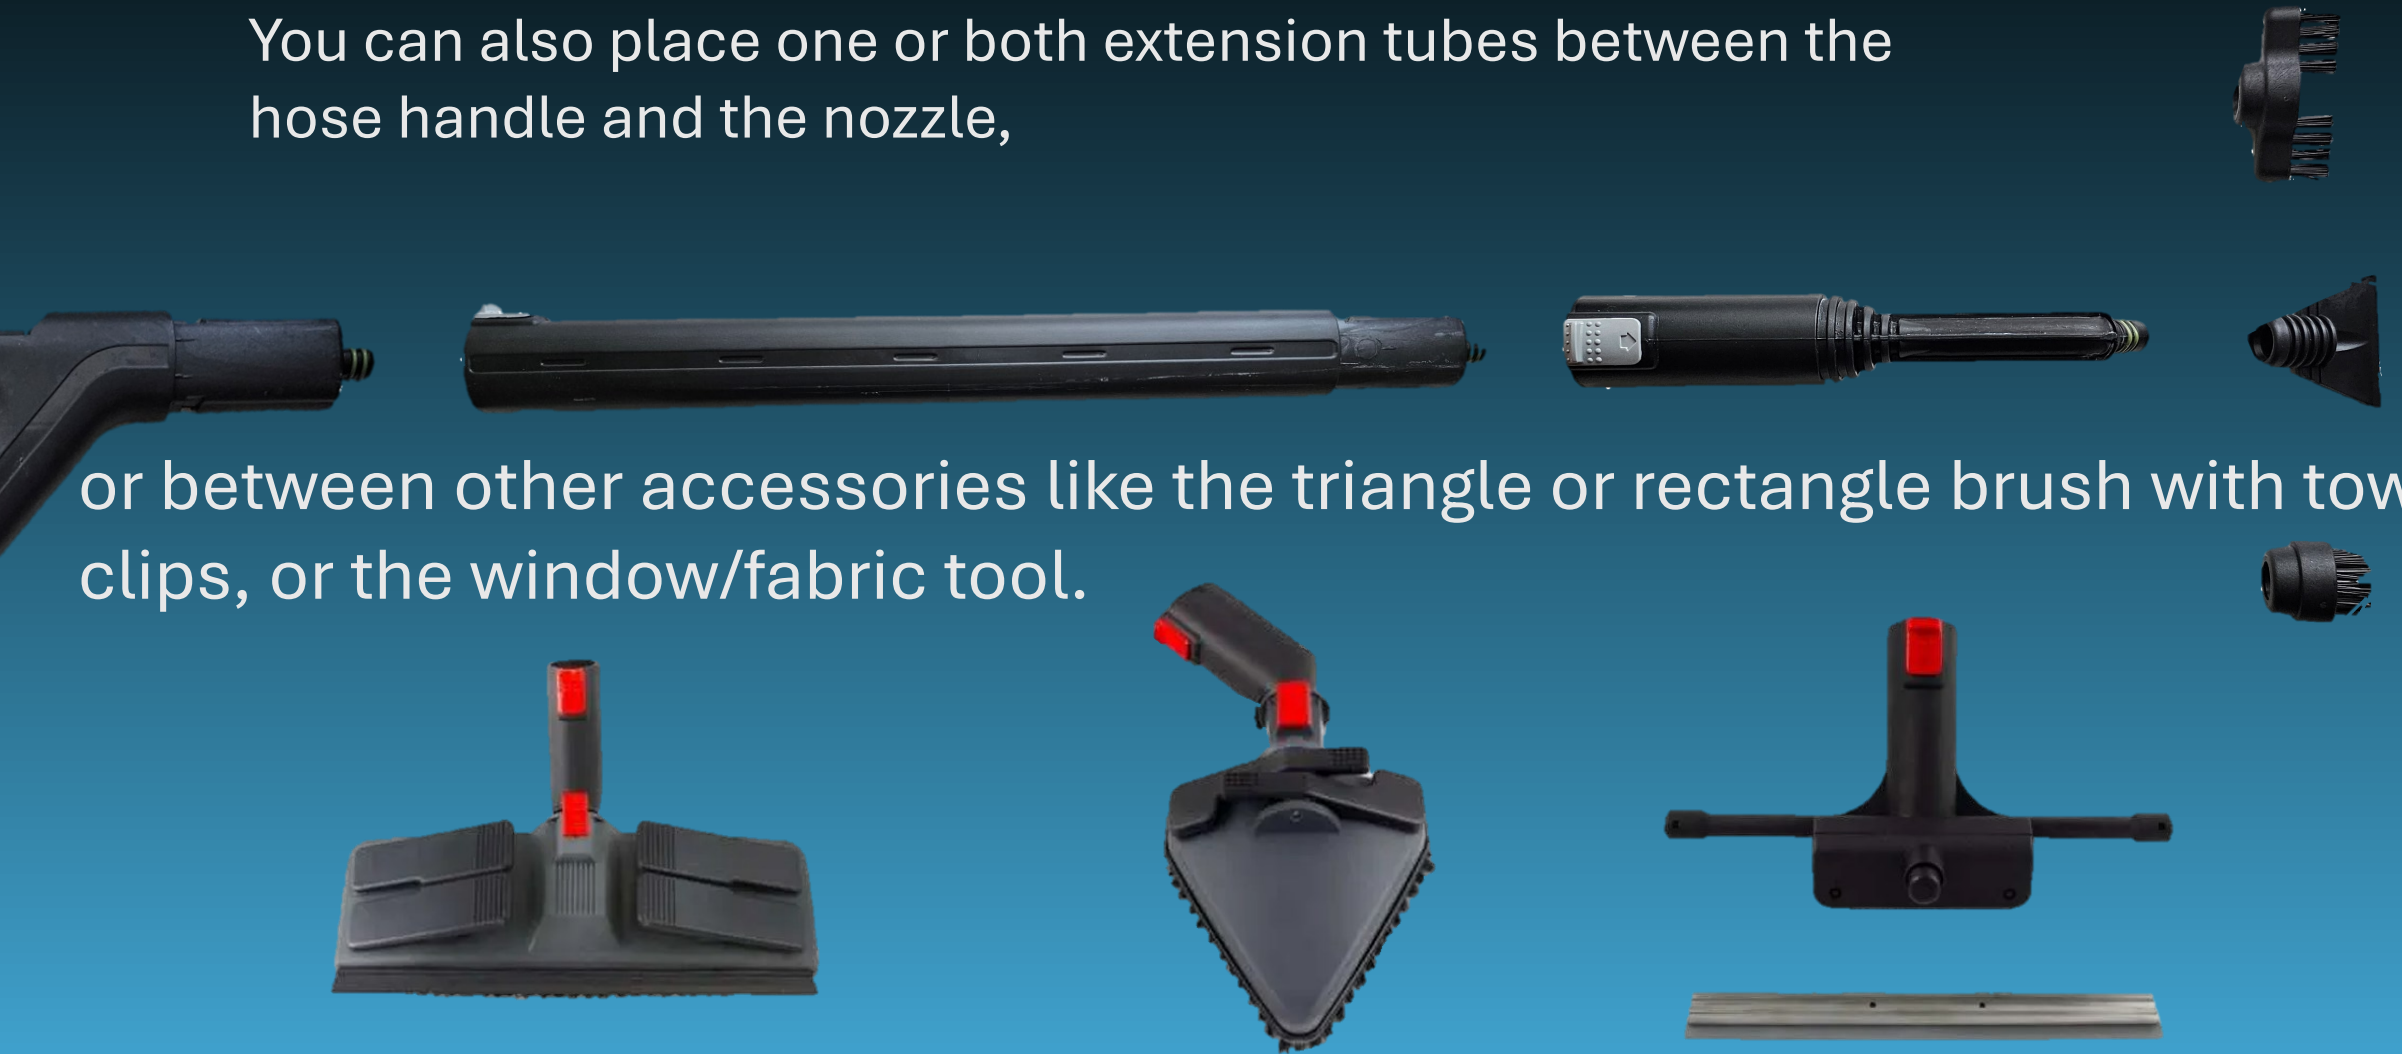

# Operating Procedure – Accessories

Using a cloth increases the heat transfer to the surface, keeps the bristles of the brush from catching on certain surfaces and collects any debris and dirt loosened in cleaning.



Place triangle brush with towel clips on to a cloth – microfibre, terry or otherwise – disposable j-cloth style cloths do not work well for this application.

Proceed to wrap the cloth around the top of the brush – ensuring there is enough cloth over the peak of the triangle to help hold the cloth in place during use. Place the sides of the cloth in the clips.



Do the same with the bottom of the cloth – ensuring coverage over all bristles. Collect remaining sides of cloth in the towel clips. This increases the heat of the steam – use EXTRA CARE when removing the cloth as it will be HOT! Note – Steam that escapes through the cloth is much hotter – ensure that you do not dispense steam near people.

Use the brush with towel as you would imagine using your hand with a cloth. As you move over the surfaces you are cleaning you will find dirt and debris removed by the steam is collected in the cloth. If the cloth becomes heavily soiled, you can CAREFULLY remove it from the brush, rinse it out and reattach it.



## *Operating Procedure – Machine Use*

- Begin steam cleaning.

IMPORTANT NOTE: The accessory you choose will also impact steam output temperature and pressure. Nozzles are higher pressure and lower temperature and large brushes with towels attached are hotter with a lower pressure output.

## *Operating Procedure – Machine Use*



***PRESSURE***

IT IS THE HEAT OF THE STEAM DOING THE WORK FOR YOU. THE HEAT IS THE SAME ON LOW, MEDIUM OR HIGH SETTING. THE DIFFERENCE IS HOW FAST THE STEAM TRANSFERS TO THE SURFACE YOU ARE CLEANING.



***TEMPERATURE***

## *Operating Procedure – Machine Use*

You can impact temperature output by adjusting the steam pressure, changing accessories or using the cloth wrapping procedure.

# Cleaning Procedure

## Healthcare - Wheelchairs



Accessories: Nozzle  
Nylon Nozzle Brush  
Triangle Brush with Towel Clips  
Microfibre Cloth  
Extension Tubes as Needed

Steam Setting: Medium

1. Use the extension tubes between the hose and the nozzle as needed.
2. Apply steam in a sideways fashion – holding the nozzle almost parallel to Velcro or seatbelt surfaces.. This allows the stain to be loosened upwards and not directed further into the carpet and padding.
3. Apply steam to Roho cushions, arm rests and bearings using the nozzle.
4. Using the triangle brush with cloth attached, steam all seats, seat backs, handgrips and cushions.
5. Replace the cloth between chairs, and/or as it becomes soiled.

# Cleaning Procedure

## Healthcare – Commode Chairs and Slings




Accessories: Nozzle  
Nylon Nozzle Brush  
Triangle Brush with Towel Clips  
Microfibre Cloth  
Extension Tubes as Needed

Steam Setting: Medium

1. Use the extension tubes between the hose and the nozzle as needed.
2. Apply steam to all crevices.
3. Using the triangle brush with cloth attached, steam all other areas to collect loosened soil.
4. Replace the cloth between chairs, and/or as it becomes soiled.

# Cleaning Procedure

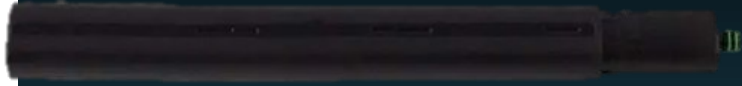

## Healthcare – Sink Drains

Accessories: Nozzle  
Plumber's Helper  
Microfibre Cloth  
Extension Tubes as Needed

Steam Setting: Medium

1. Use the extension tubes between the hose and the nozzle as needed.
  2. Attach the Plumber's Helper to the nozzle.
  3. Place the Plumber's Helper over the sink drain. Ensure a seal, but do not press on the accessory. You may see steam come from around the seal or the sink overflow.
  4. Apply steam for up to 10 seconds. You will feel back pressure and that is a good signal to stop.
  5. Wipe any debris that comes up from the drain with a cloth.
- \*\*Do not touch plumbing after treatment as it becomes hot.**

# Cleaning Procedure



## Floors (tile, vinyl, laminate, terrazzo, etc.)



Accessories: Rectangle Brush  
2 Extension Tubes  
Microfibre Cloths

Steam Setting: Medium

1. Sweep area to be cleaned.
2. Attach Rectangle Brush to Extension Tubes. For tough dirt, use the bristles on the Rectangle Brush to lightly scrub the floor.
3. Once all dirt is loosened, or for maintenance cleaning, attach a cotton cloth to the Rectangle Brush with the clips. Proceed to clean the floors, allowing the cloth to collect the dirt and moisture.

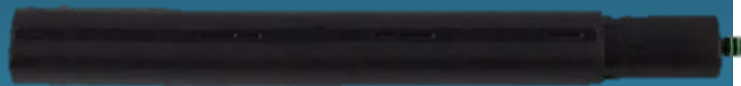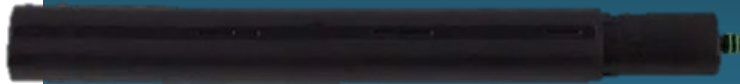

# Cleaning Procedure

## Floors - Grout

Accessories: 2 Extension Tubes  
Steam Nozzle  
Nozzle Brush – As appropriate

Steam Setting: Medium

1. Select your nozzle brush based on the level of soil, the condition of the grout and the flooring surrounding the grout. Nylon is usually the best choice. You want to make sure you don't loosen and remove any grout or scratch any surrounding tile surfaces. Heavy grease build up can withstand using a brass brush.
2. Use the extension tubes between the hose and the nozzle. Put your selected brush on the end of the nozzle.
3. Work in a manageable area at a time. You will want to use the floor procedure to collect dirt loosened from the grout before it has a chance to resettle.



# Cleaning Procedure

## Floors - Threshold or Door Jamb

Accessories: 2 Extension Tubes  
Steam Nozzle  
Nozzle Brush – As appropriate

Steam Setting: Medium

1. Select your nozzle brush based on the level of soil, and the construction of the threshold. Metal plates and entranceways can benefit from using a brass nozzle brush. Transitions between rooms will be best cleaned with the nylon brush around the base of the door frame.
2. Use the extension tubes between the hose and the nozzle. Put your selected brush on the end of the nozzle.
3. Wipe any loosened dirt as you clean the floor following the floor procedure or with a cloth.



# Cleaning Procedure (MDF)

## Floors - Baseboards (Tile, Vinyl,

Accessories: 2 Extension Tubes  
Steam Nozzle  
Nozzle Brush – Nylon  
Triangle Brush with Towel Clips  
Microfibre Cloth

Steam Setting: Medium

1. For baseboards that are tile which continues up from the floor, first use the nozzle and nylon brush to detail clean the grout lines if desired.

2. Use the extension tubes between the hose and the triangle brush with towel clips. Wrap the cloth around the triangle brush.

3. You can use the swivel lock on the triangle brush to move easily along the baseboards. The cloth will collect loosened dust and dirt.

4. Avoid letting the steam accessory rest in one place for too long when cleaning painted surfaces.



# Cleaning Procedure

## Floors – Build Up from Cleaning

Accessories: 2 Extension Tubes  
Steam Nozzle  
Nozzle Brush –Large Nylon

Steam Setting: Medium

1. Use the extension tubes between the hose and the nozzle. Place the brush on the end of the nozzle.
2. Apply heat to the areas along the edge of the floor that have dirt, detergent and other build up from traditional mopping and auto scrubbing procedures.
3. Once the build up is removed, you can steam residual up using the Floor procedure.



# Cleaning Procedure

## Carpets – Spot and Stain

Accessories: 2 Extension Tubes  
Steam Nozzle

Steam Setting: Medium



1. Use the extension tubes between the hose and the nozzle.
2. Apply steam in a sideways fashion – holding the nozzle almost parallel to the carpet. This allows the stain to be loosened upwards and not directed further into the carpet and padding.
3. Pat the area with a cloth, or proceed to the carpet refreshing procedure.

\*\*As the carpet dries, the stain will continue to lighten. The evaporating water will assist in removing residual dirt. Wait until the area is dry to evaluate the need for further treatment.



# Cleaning Procedure

## Carpets (Refresh, deodourize, pest control)

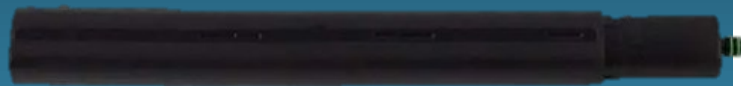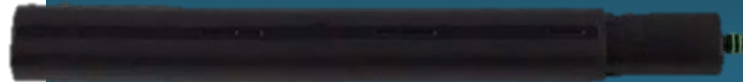

Accessories: 2 Extension Tubes  
Rectangle Brush with Towel Clips  
Microfibre Cloth

Steam Setting: Medium

1. Wrap a microfibre cloth around the Rectangle Brush using the Towel Clips.
2. Use the extension tubes between the hose and the rectangle brush with towel clips.
3. Apply steam to the whole surface area of the carpet, moving at a moderate pace to allow the heat to transfer to the surface.
4. Replace the cloth as it becomes soiled.

\*\*Move slower to maximize heat transfer when using this procedure as part of a pest control strategy.

# Cleaning Procedure

## Washrooms – Toilet and Urinal

Accessories: Nozzle  
Nylon Nozzle Brush  
Extension Tube (as needed)  
Triangle Brush  
Microfibre Cloth

Steam Setting: Low

1. Extension Tubes can be used to allow distance between the operator and the toilet/urinal. They can also assist with cleaning the base of the toilet.
2. Use the nozzle to direct steam at the hinges of the seat, the flush handle and the base of the toilet..
3. Use the nozzle brush to clean the visible plumbing and interior of the urinal.
4. Use the triangle brush with cloth to wipe the exterior of the bowl and the seat of the toilet. Replace the cloth as it becomes soiled.

\*\*Low pressure prevents airborne soil and odour.



# Cleaning Procedure

## Washrooms – Sink and Counter

Accessories: Nozzle  
Triangle Brush with Towel Clips  
Microfibre Cloth  
Plumber's Helper



Steam Setting: Low/Medium

1. Using the nozzle, you can steam around taps and sink drains to remove dirt. Wipe with a microfibre cloth.
2. Using the Plumbers Helper on the end of the nozzle to steam the sink drain to remove bacteria and grease. (See Sink Drain SOP).
3. Wrap a microfibre cloth around the Triangle Brush using the Towel Clips.
4. Use the Triangle Brush with cloth attached to wipe counter and backsplash.
5. Replace the cloth as it becomes soiled.

# Cleaning Procedure

## Washrooms – Partitions

Accessories:      Extension Tubes as Needed  
                         Triangle Brush with Towel Clips  
                         Window Squeegee  
                         Microfibre Cloth

Steam Setting: Medium

1. Use the extension tubes between the hose and the Window Tool or Triangle Brush with Towel Clips. The Squeegee is good for smooth partitions. The Triangle Brush is the better selection for textured panels.
2. Starting at the top, apply steam and drag the squeegee downwards – repeating until the entire partition is clean.
3. You can choose to wipe the partition with the Triangle brush with cloth attached – work from top to bottom, moving the accessory in a motion that mimics wiping with your hand.
4. Replace the cloth as it becomes soiled.



# Cleaning Procedure

## Washrooms – Mirrors

Accessories:      Extension Tubes as Needed  
                         Window Squeegee  
                         Microfibre Cloth

Steam Setting: Medium

1. Use the extension tubes between the hose and the Window Tool to reach the top of high or large mirrors.
2. Starting at the top, apply steam and drag the squeegee downwards – repeating until the entire mirror is clean.
3. With steam off, you can use the squeegee to remove any excess moisture.
4. Wipe the base of the mirror with a cloth.



# Cleaning Procedure

## Common Areas – Windows and Glass

Accessories:    Extension Tubes as Needed  
                     Window Squeegee  
                     Microfibre Cloth

Steam Setting: Medium

1. Use the extension tubes between the hose and the Window Tool to reach the top of high or large mirrors.
2. Starting at the top, apply steam and drag the squeegee downwards – repeating until the entire mirror is clean.
3. With steam off, you can use the squeegee to remove any excess moisture.
4. Wipe the base of the mirror with a cloth.

\*\*You can use this procedure for glass doors, glass in display cases, glass walls in stairwells, plexiglass partitions and all interior and exterior windows.

\*\*Do not apply steam to glass when extreme cold weather conditions exist.



# Cleaning Procedure

## Common Areas – Upholstered Seating

Accessories:     Extension Tubes as Needed  
                      Nozzle  
                      Triangle Brush with Towel Clips  
                      Microfibre Cloth

Steam Setting:   Low/Medium

1. Use one or both extension tubes between the hose and the nozzle to ergonomically reach the backs, sides, arms and bottom of upholstered seating.
2. Using the nozzle you can clean along piping and remove any stains by holding the nozzle parallel to the stain to lift it out of the fabric.
3. Using the triangle brush with towel clips and a cloth attached wipe the entire surface of the seating. The cloth allows the bristles to pass over the fabric easily and collects loosened soil from the surface.
4. Change the cloth as it becomes soiled.



# Cleaning Procedure

# Common Areas – Garbage Containers



Accessories:      Extension Tubes as Needed  
                         Nozzle  
                         Crevice Scraper Tool  
                         Nylon Nozzle Brush  
                         Triangle Brush with Towel Clips  
                         Microfibre Cloth

Steam Setting: Low/Medium

1. Use the extension tubes if needed between the hose and any selected accessory.
2. Sweep any large debris from area to be cleaned.
3. Use the nozzle to clean edges of receptacle. Use the nylon brush for larger areas of soil and use the scraper tool for hard, solid mess.
4. Once all detail cleaning is done, switch to the triangle brush with cloth attached and wipe the entire surface as you would with your hand holding a cloth.
5. Change the cloth as it becomes soiled.

# Cleaning Procedure

## Common Areas – Walls

Accessories:     Extension Tubes as Needed  
                     Triangle Brush with Towel Clips  
                     Microfibre Cloth

Steam Setting: Low/Medium

1. Use the extension tubes if needed between the hose and triangle brush with towel clips.
2. Start at the top of the wall and move downwards.
3. On painted or wallpapered surfaces you are best to make several faster passes over the surface as opposed to the usual method of moving slowly. This will prevent excess heat transfer to surfaces that are more easily damaged.
4. Change the cloth as it becomes soiled.

\*For wall cleaning that is a routine part of operation, you may consider the optional Wall Mop attachment.



# Cleaning Procedure

## Common Areas- Crevices and Corners

Accessories:     Extension Tubes as Needed  
                      Nozzle  
                      Nylon Nozzle Brush  
                      Scraper Tool

Steam Setting: Medium

1. Use the extension tubes if needed between the hose and nozzle.
2. Aim nozzle directly into crevice or corner and apply steam to loosen debris.
3. Use the scraper tool or nozzle brush if extra agitation is required.
4. Continue to cleaning procedure for the rest of the area you are cleaning.



# Cleaning Procedure

## Kitchen – Storage Racks

Accessories:    Extension Tubes as Needed  
                      Nozzle  
                      Brass Nozzle Brush

Steam Setting: Low/Medium

1. Use the extension tubes if needed between the hose and nozzle.
2. Attach the nozzle brush to the nozzle.
3. Apply steam on the surface of the racks, posts and legs until dirt is loosened
4. Wipe dry as necessary.

\*\*For extreme soil on metal surfaces you can use a scouring pad with a brass nozzle brush nestled into it to provide a larger area of heat transfer and a cost effective and disposable cleaning attachment.



# Cleaning Procedure

## Kitchen – Equipment Casters and Legs

Accessories:    Extension Tubes as Needed  
                      Nozzle  
                      Brass Nozzle Brush

Steam Setting: Medium/High

1. Use the extension tubes if needed between the hose and nozzle.
2. Attach the nozzle brush to the nozzle.
3. Apply steam to legs and casters/wheels using the brass nozzle brush to agitate the dirt.
4. Carefully remove the brass nozzle brush (it will become hot during use) and use the steam nozzle to apply steam directly to the wheel and any crevices where loosened dirt has collected.
5. Wipe as necessary with a cloth.



# Cleaning Procedure

## Kitchen – Oven

Accessories:    Extension Tubes as Needed  
                      Nozzle  
                      Brass Nozzle Brush

Steam Setting: Medium/High

1. Turn the oven off and remove racks.
2. Use the extension tubes if needed between the hose and nozzle.
3. Attach the nozzle brush to the nozzle.
4. Apply steam to all areas of heavy carbon and grease build up. Always use care not to press hard enough to damage surfaces being cleaned.
5. Carefully remove the brass nozzle brush (it will become hot during use) and use the steam nozzle to apply steam directly to the hinges on the door, the sides, edges and rack supports.
6. Using the brush – clean racks before returning to the oven.
7. Wipe as necessary with a cloth.



# Cleaning Procedure

## Kitchen – Fryers

Accessories:    Extension Tubes as Needed  
                      Nozzle  
                      Brass Nozzle Brush

Steam Setting: Medium/High

1. Drain the fryer and remove baskets.
  2. Use the extension tubes if needed between the hose and nozzle.
  3. Attach the nozzle brush to the nozzle.
  4. Apply steam to all areas of heavy carbon and grease build up. Always use care not to press hard enough to damage surfaces being cleaned.
  5. For recovery cleaning you may want to use the steel nozzle brush.
  6. Drain grease and water that has collected in fryer.
  7. Wipe as necessary with a cloth.
- \*\*For extreme soil on metal surfaces you can use a scouring pad with a brass nozzle brush nestled into it.



# Cleaning Procedure

## Kitchen – Refrigeration Coils

Accessories:    Extension Tubes as Needed  
                      Nozzle  
                      (Optional Vacuum)

Steam Setting: Low/Medium

1. You can vacuum excess dust off coils. This step is optional, but makes for easier clean up.
2. Use the extension tubes if needed between the hose and nozzle.
3. Use the nozzle to apply steam across the coil fins.
4. Wipe up loosened dust with paper towel or cloth.

**\*\*Do not touch coils with nozzle as fins are easily bent.**



# Cleaning Procedure

## Kitchen– Walls (textured or tiled)

Accessories:     Extension Tubes as Needed  
                     Triangle Brush with Towel Clips  
                     Microfibre Cloth

Steam Setting: Low/Medium

1. Use the extension tubes if needed between the hose and triangle brush with towel clips.
2. Start at the top of the wall and move downwards.
3. You can remove the cloth and use the bristles on the triangle brush to provide extra agitation to the textured walls to help loosen dirt.
4. Change the cloth as it becomes soiled.



# Cleaning Procedure

## Kitchen – Bussing Carts

Accessories: Triangle Brush with Towel Clips  
Nozzle  
Small Nylon Nozzle Brush

Steam Setting: Low/Medium

1. Using the Nozzle, apply steam along crevices, edges and corners of cart.
2. Add the Nylon Nozzle Brush and apply light agitation to areas of heavy soil..
3. Attach a cloth to the triangle brush with towel clips and wipe entire surface to remove loosened dirt and complete cleaning the larger areas of the surface.



# Cleaning Procedure

## Specialty – Bed Bugs

Accessories:     Rectangle Brush with Towel Clips  
                       Steam Nozzle  
                       Extension Tubes as Needed  
                       Microfibre Cloth

Steam Setting: Low/Medium

1. Use the extension tubes if needed between the hose and nozzle.
2. Use the nozzle on low setting to apply steam to any piping, edges, seams, zippers, brackets etc.
3. Attach a cloth to the rectangle brush using the towel clips. Apply steam on medium setting to the entire surface needing treatment. Move slowly to allow for maximum heat transfer.
4. Change the cloth if it becomes saturated or soiled.
5. Vacuum any loosened visible bed bugs.

\*\*Steam is part of an integrated pest management process.



# Cleaning Procedure

## Specialty – Chewing Gum

Accessories: Steel Nozzle Brush  
Nozzle  
Extension Tubes as Needed

Steam Setting: Medium/High

1. Use the extension tubes if needed between the hose and nozzle.
2. Attach the nozzle brush to the nozzle.
3. Apply steam to gum spots – holding the brush still as the gum heats and begins to dissolve,
4. Provide agitation with the steel bristles to remove remaining gum from surface.
5. Collect loosened debris with a cloth or paper towel and dispose of it.



# Cleaning Procedure

## Specialty – Graffiti

Accessories: Nozzle Brush – select based on surface  
Nozzle  
Extension Tubes as Needed

Steam Setting: Medium/High

1. Use the extension tubes if needed between the hose and nozzle.
2. Attach the appropriate nozzle brush to the nozzle. Steel is good for brick surfaces, brass for stucco and nylon for painted metal.
3. Apply steam to graffiti– holding the brush still as the steam transfers heat to the area/
4. Provide agitation with the steel bristles to remove remaining gum from surface.
5. Wipe or rinse area to remove loosened paint/marker.

\*Many surfaces are darker when wet. You may want to wait until the area dries to assess if a second treatment is required.





# If I Need Help, What Do I Do?

We are extremely efficient, factory trained, and dedicated to doing service on SteamKing Systems, so we are good at it, fast, and we keep all necessary parts in stock.

If your SteamKing is not working properly - not turning on, not heating up, not building pressure or ejecting steam at points other than the end of the hose - you may need to send it to us for repair.

When you send us your SteamKing you usually need only send the base unit. If you are unsure of what to send - Just ask.

Please call 800-281-4413 to arrange a return shipping waybill



For questions about  
this content or training  
related requests,  
please contact  
[elle@intersteam.com](mailto:elle@intersteam.com)

We will be  
unable to  
repair  
machines in  
which  
chemicals  
have been  
introduced  
into the  
boiler

Please read the manual  
supplied with the  
machine which contains  
complete safety  
instructions, warranty  
details, technical data  
and more. This training  
guide is not designed to  
replace the manual  
supplied with the  
machine and the  
information in the manual  
is critical for informed and  
safe use of a steam  
cleaning system.

Do not use  
damaged  
accessories  
with your  
steam cleaner.  
Doing so can  
cause injury or  
can further  
damage other  
machine  
components.

# Disclaimer



1-800-281-4413 [www.intersteam.com](http://www.intersteam.com)

These instructions contain information needed for the correct use, safe handling and correct maintenance of the SteamKing Cleaning System. Familiarization with and observance of these instructions lead to the safe and proper use of this machine. These instructions cannot cover all possible uses of the system. For any further information please contact Intersteam Technologies. All legal obligations of Intersteam Technologies are based on the terms of sale which also contains the full and exclusive terms and conditions of the warranty. These instructions do not limit or extend the conditions of the warranty. The instructions contain information protected by copyright and may not be reproduced in any way or translated into any other language without the prior written authorization of Intersteam Technologies.